


CFMoto CForce 600-625 snorkel kit installation.



Remove top plastics, as well as the inner fenders on the left and right sides.

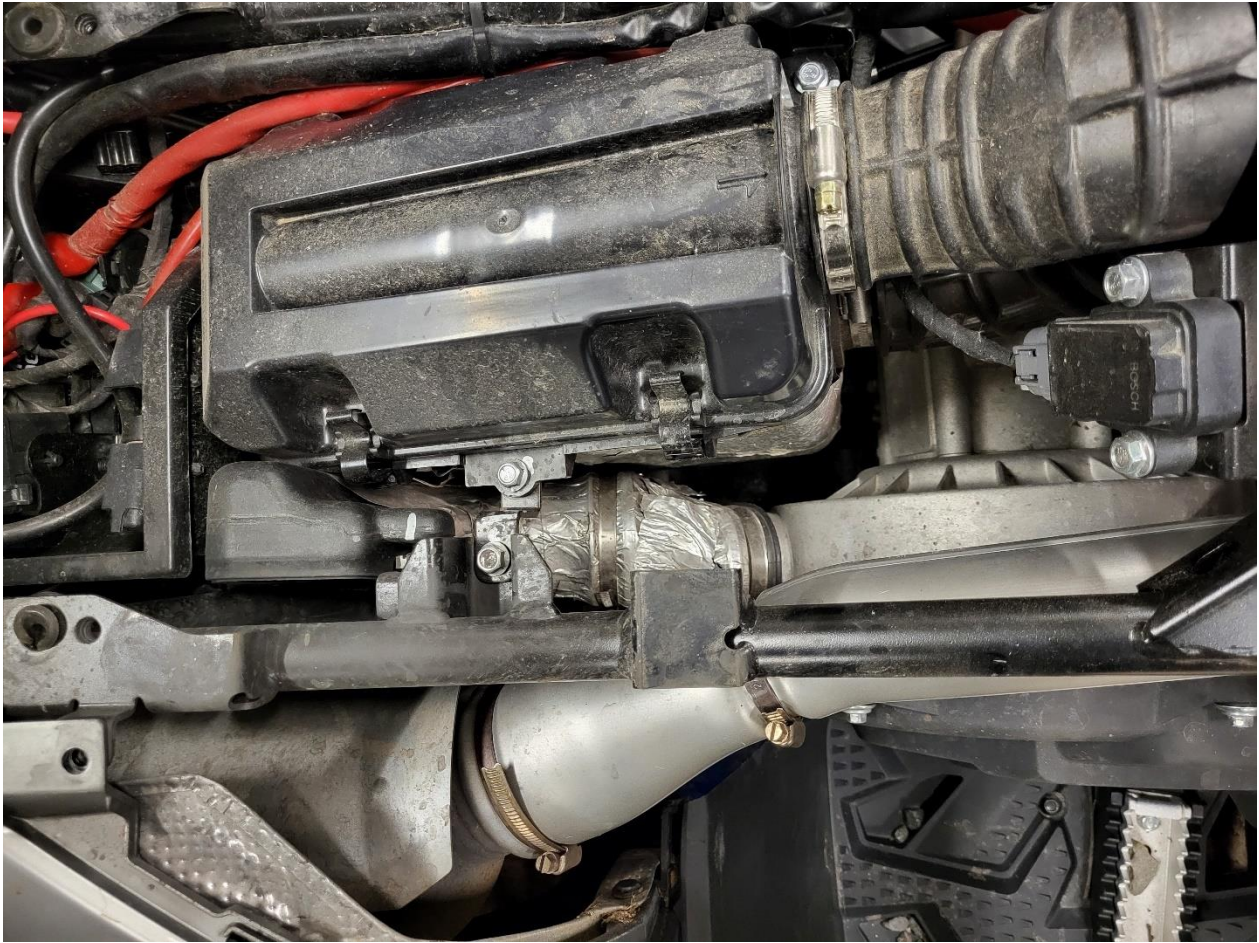


Take airbox off.





Remove dust release valve.




**Install bolt with o-ring on dust release valve place.
Reinstall airbox.**

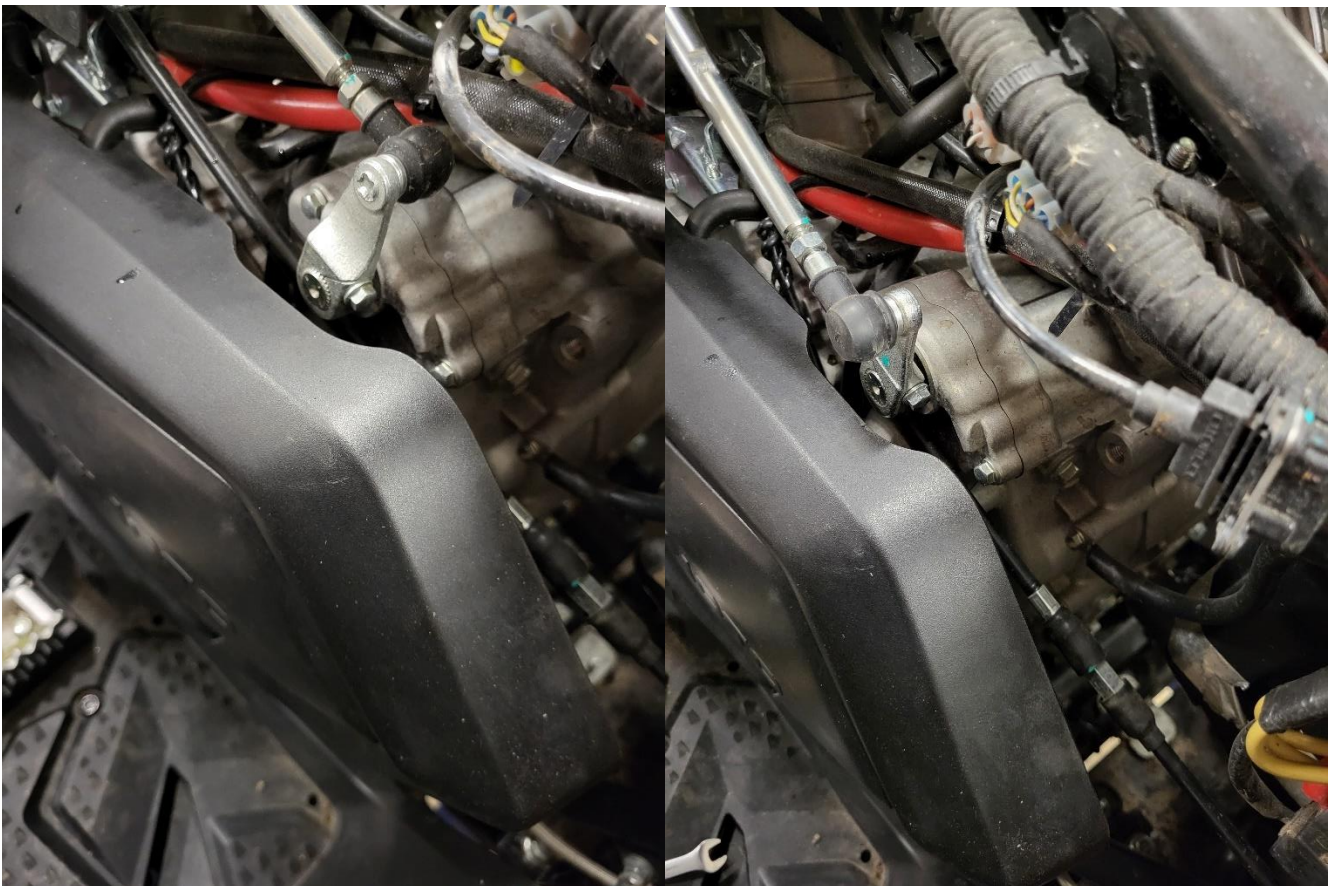

Flip bellcrank.

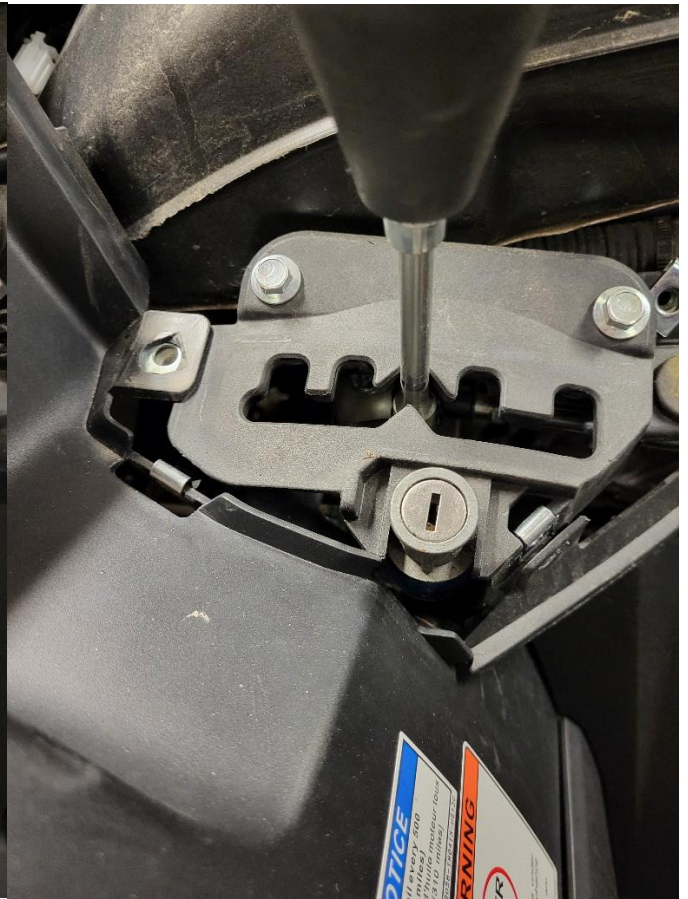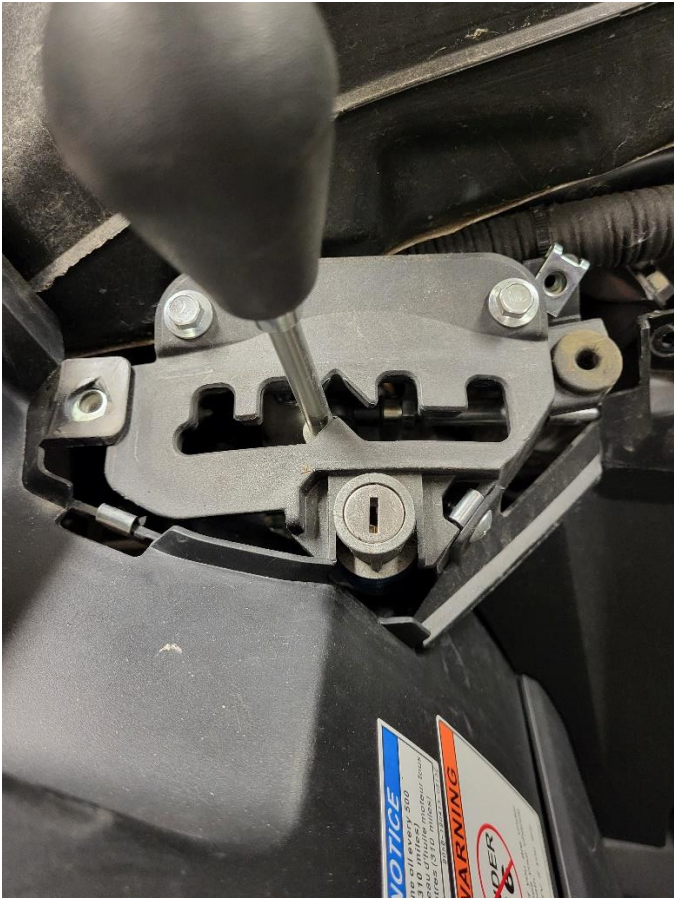


NOTE! Remember line your shifter.

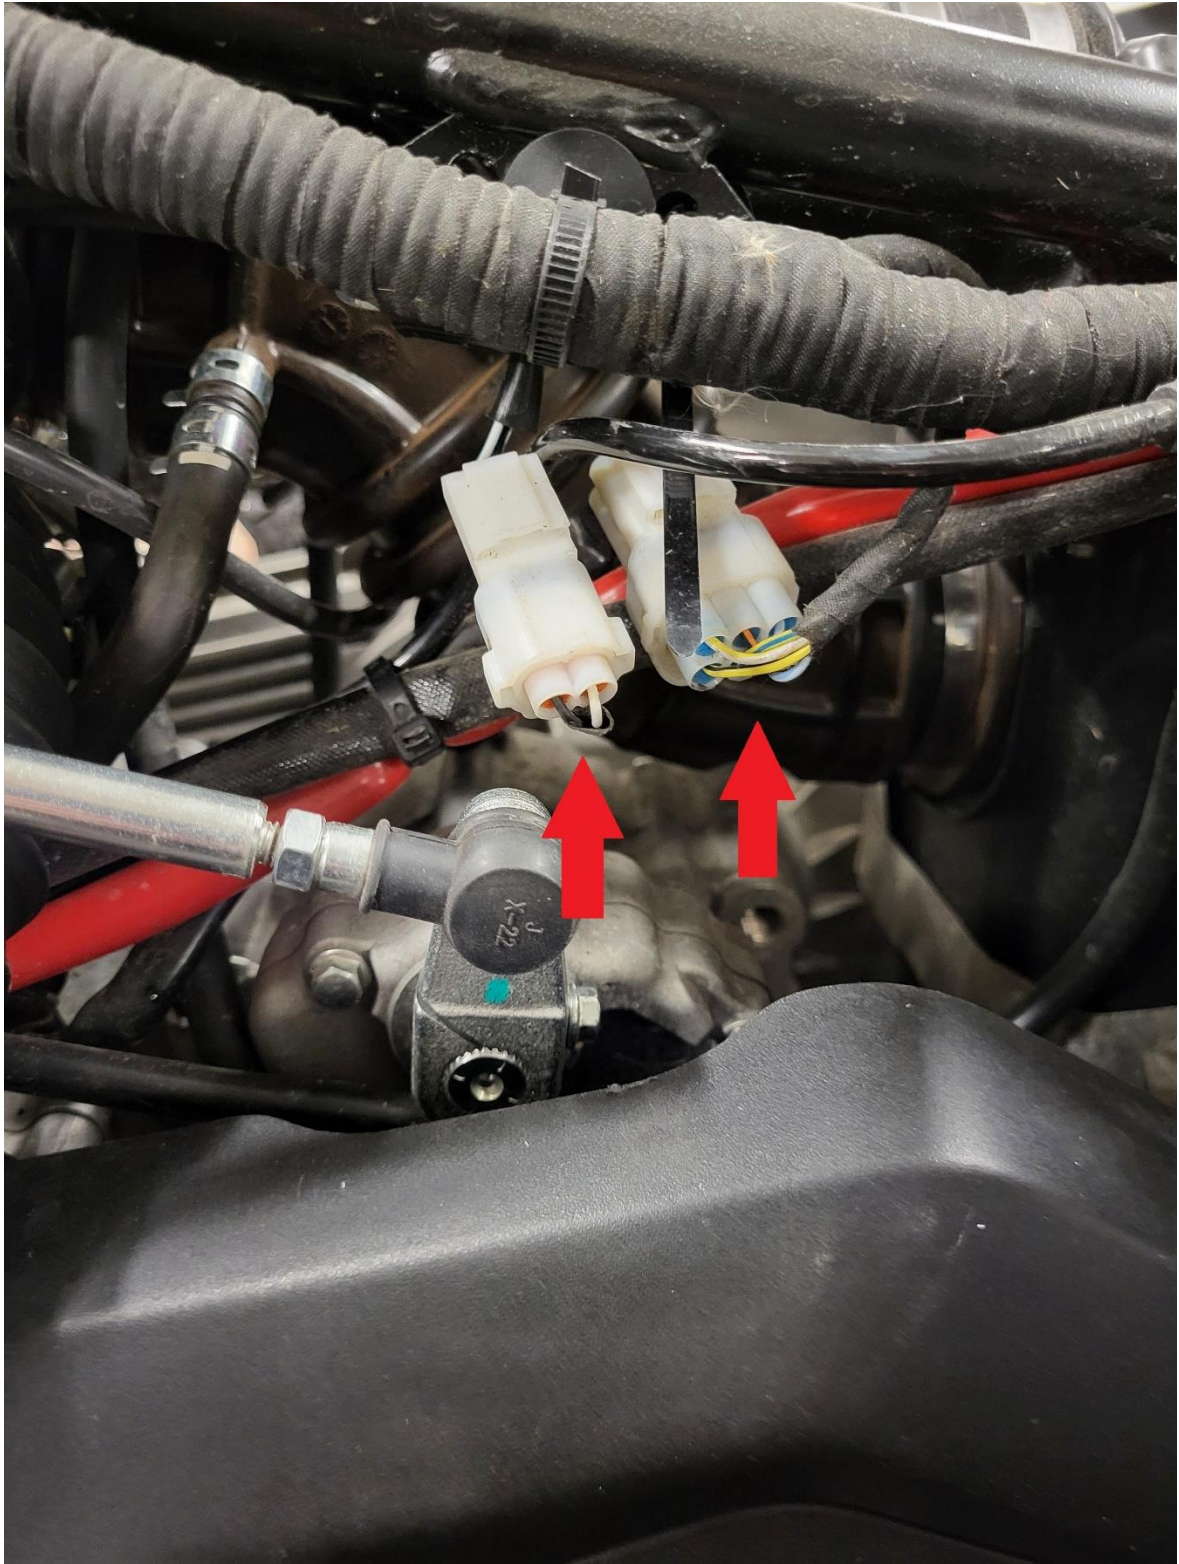


Remove these two connector from frame.




Remove CVT intake pipe.

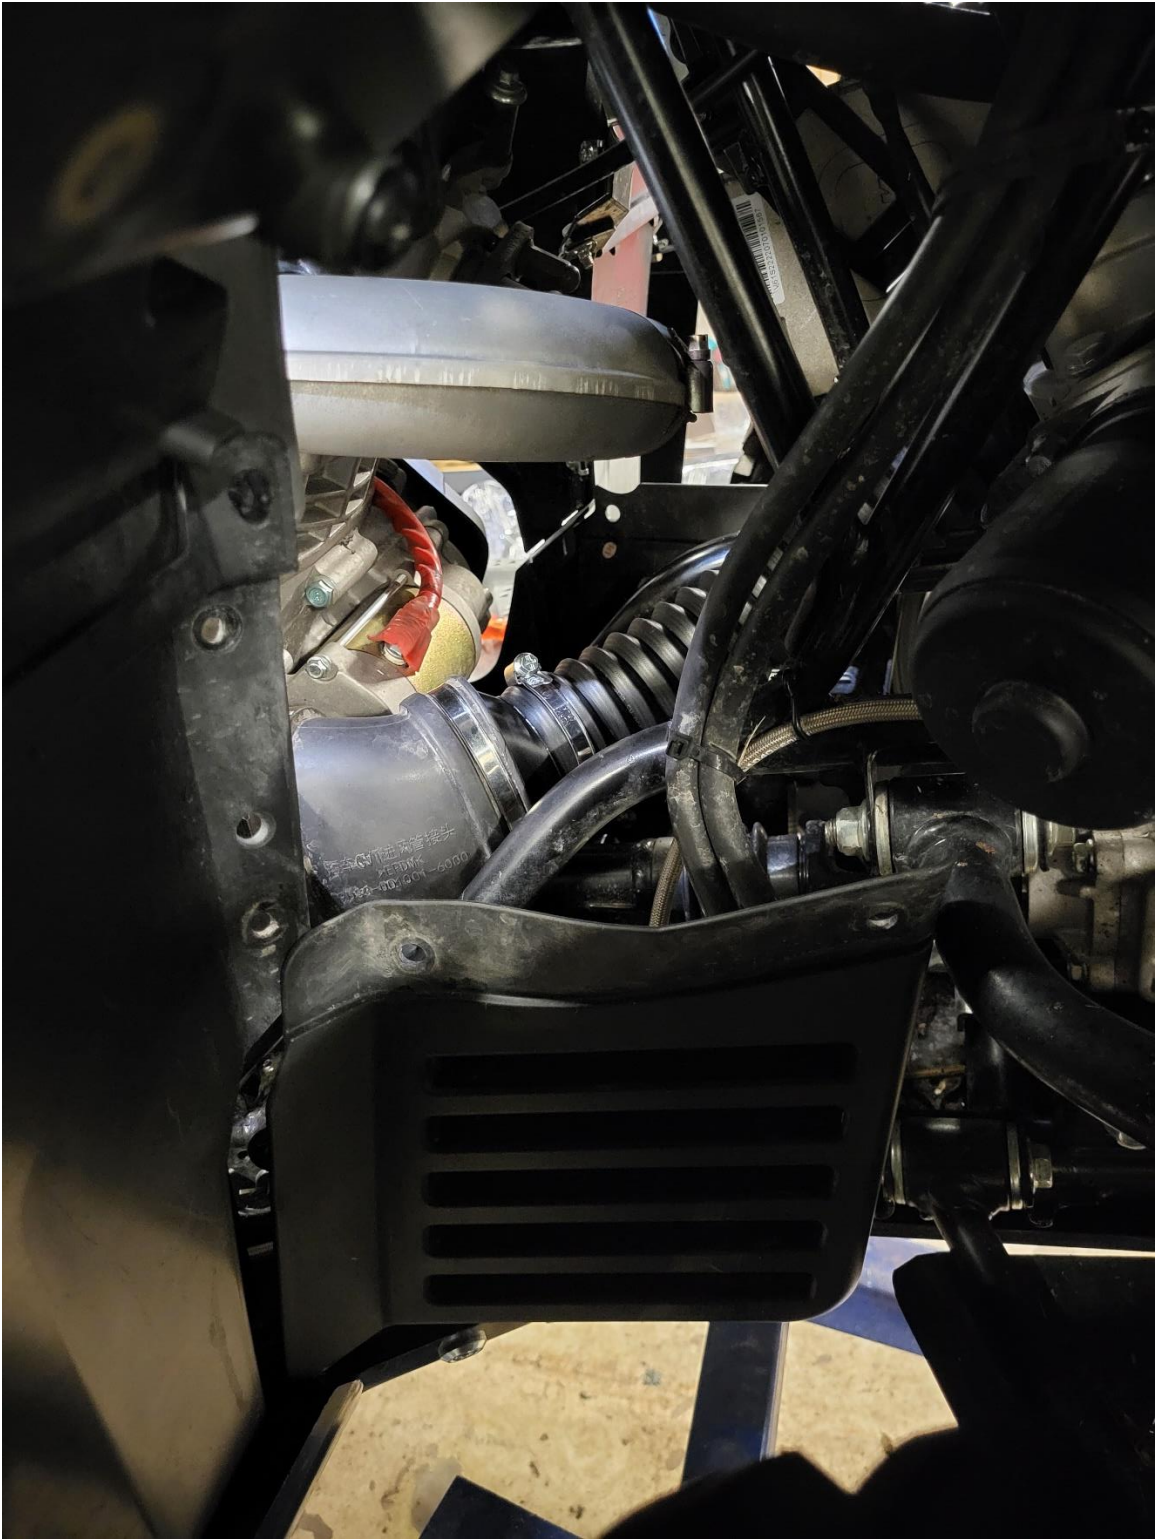


Install 3D printer 51-76 reducer and hose.

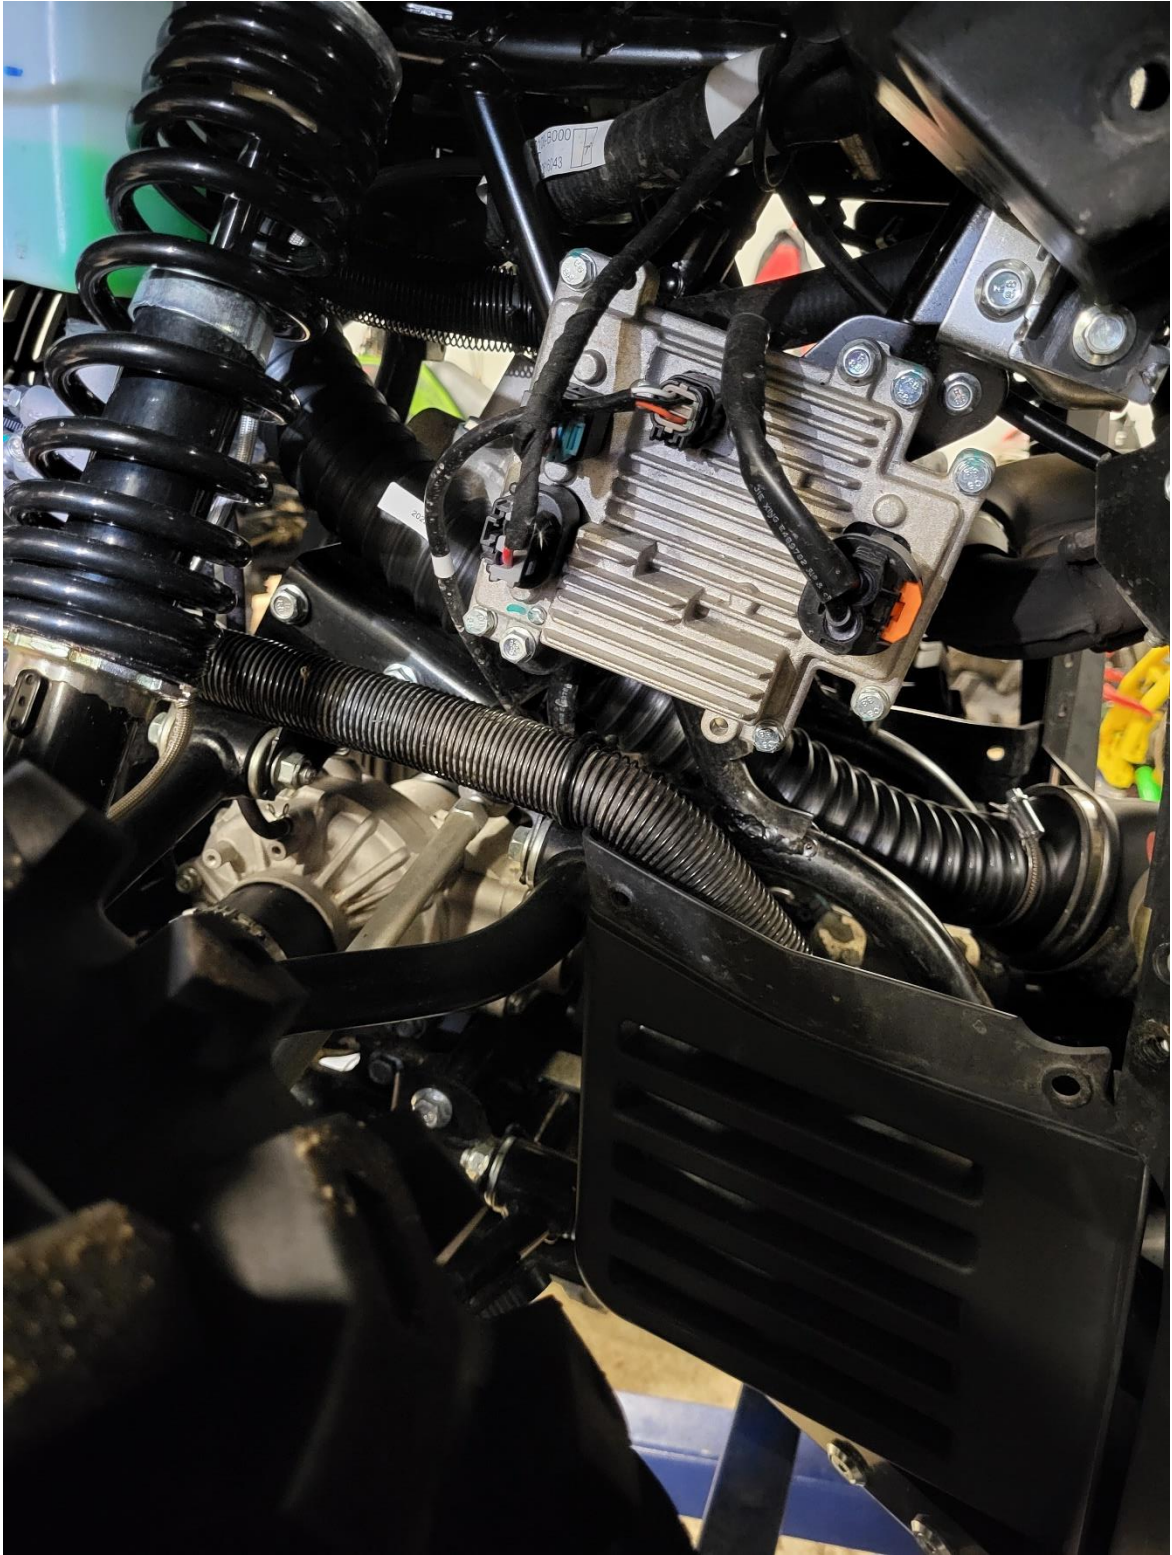


Pull hose left side power steering unit.

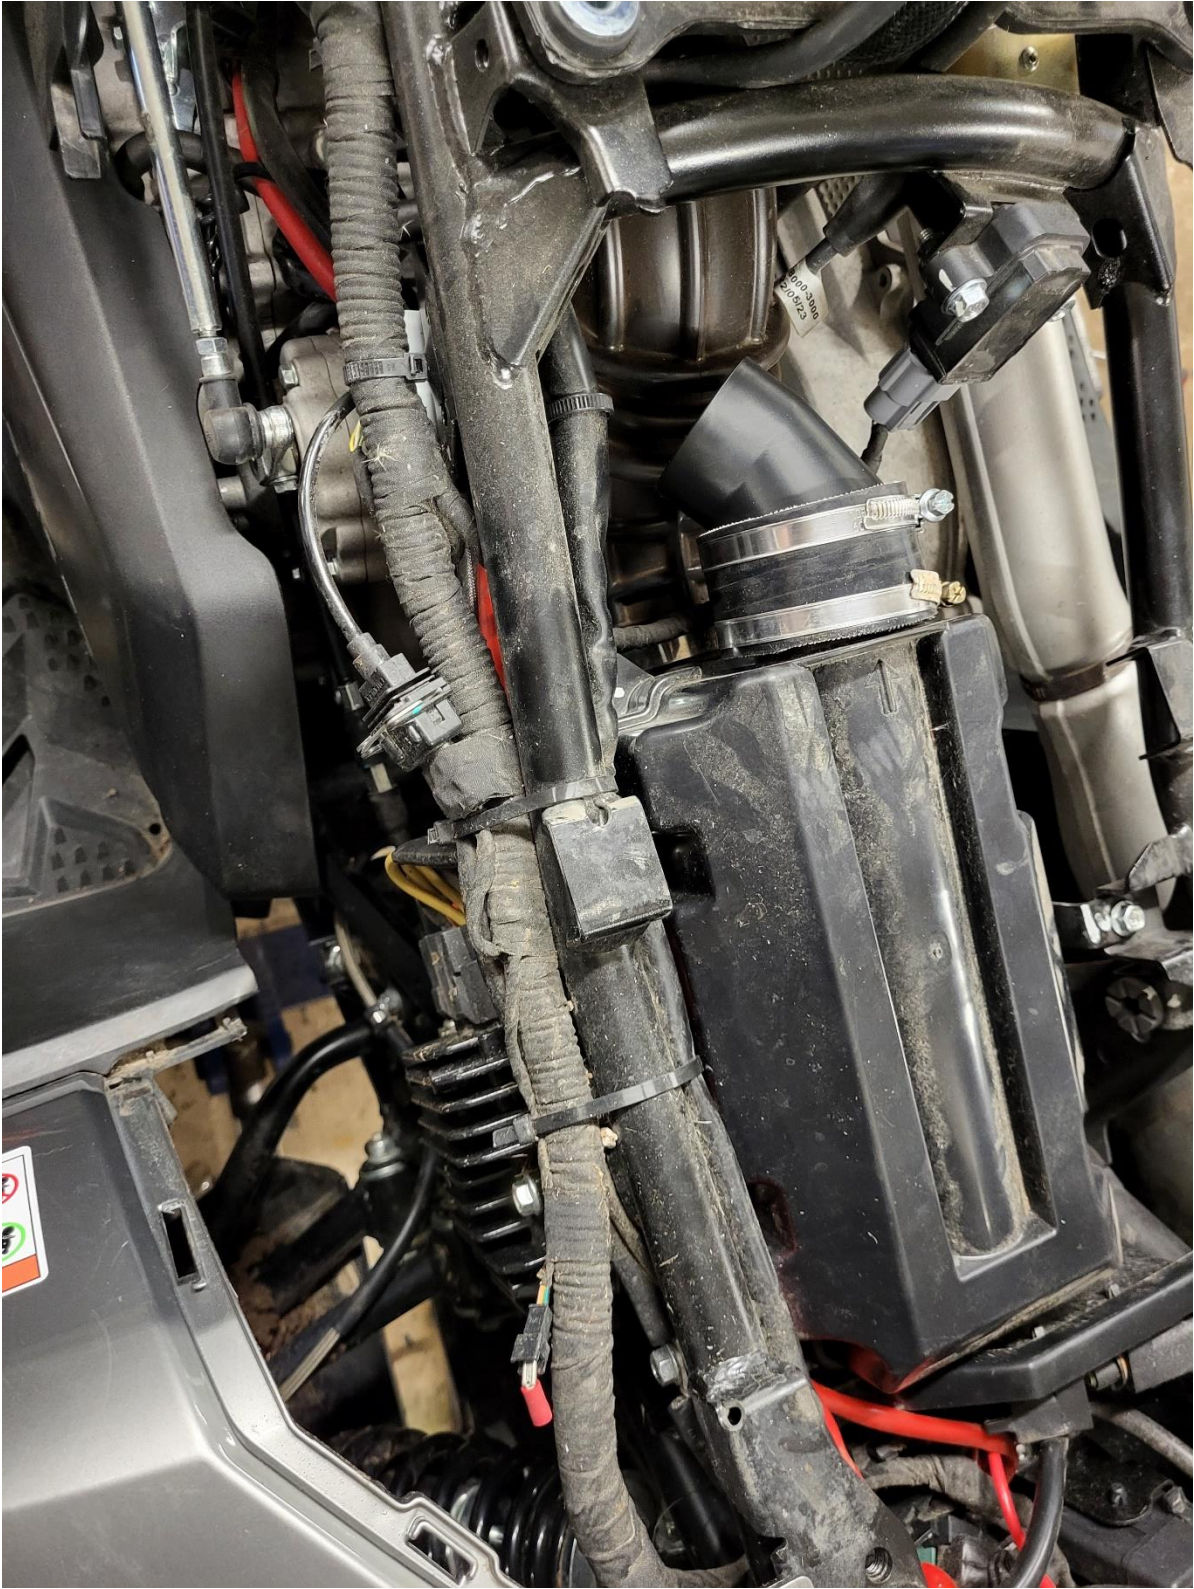


Install 3D printer 51-60, 60 degree reducer to the airbox.

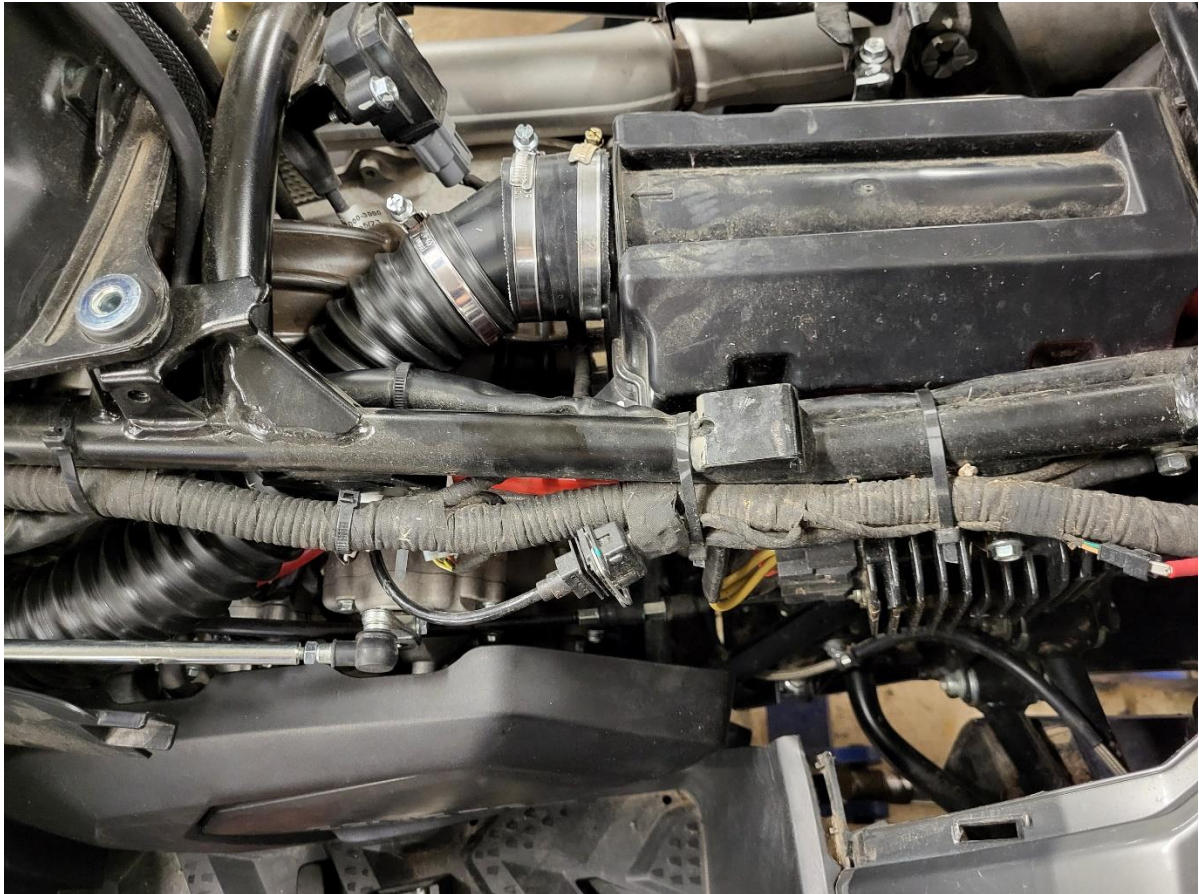


Install hose to the airbox.

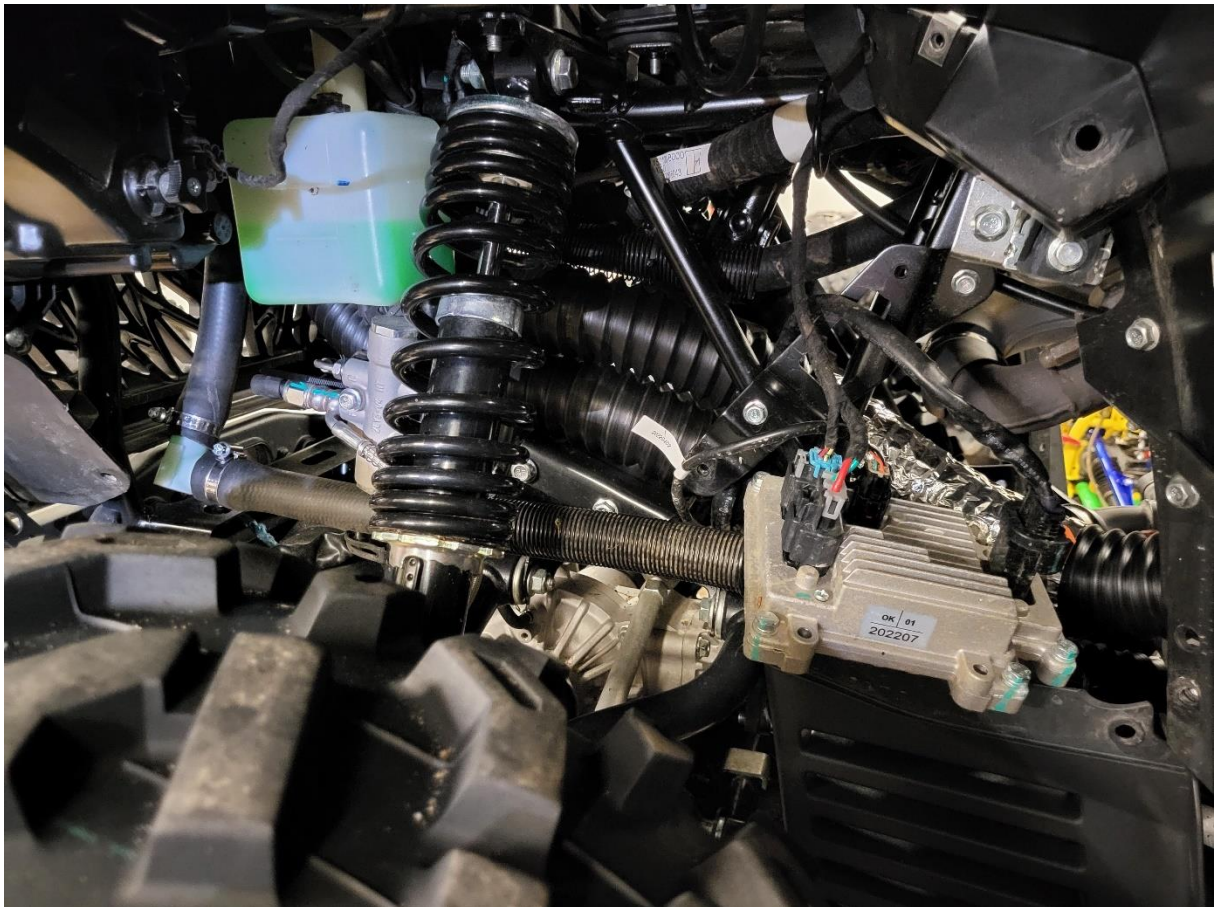

**Airbox hose go upper.
Left side power steering unit.**

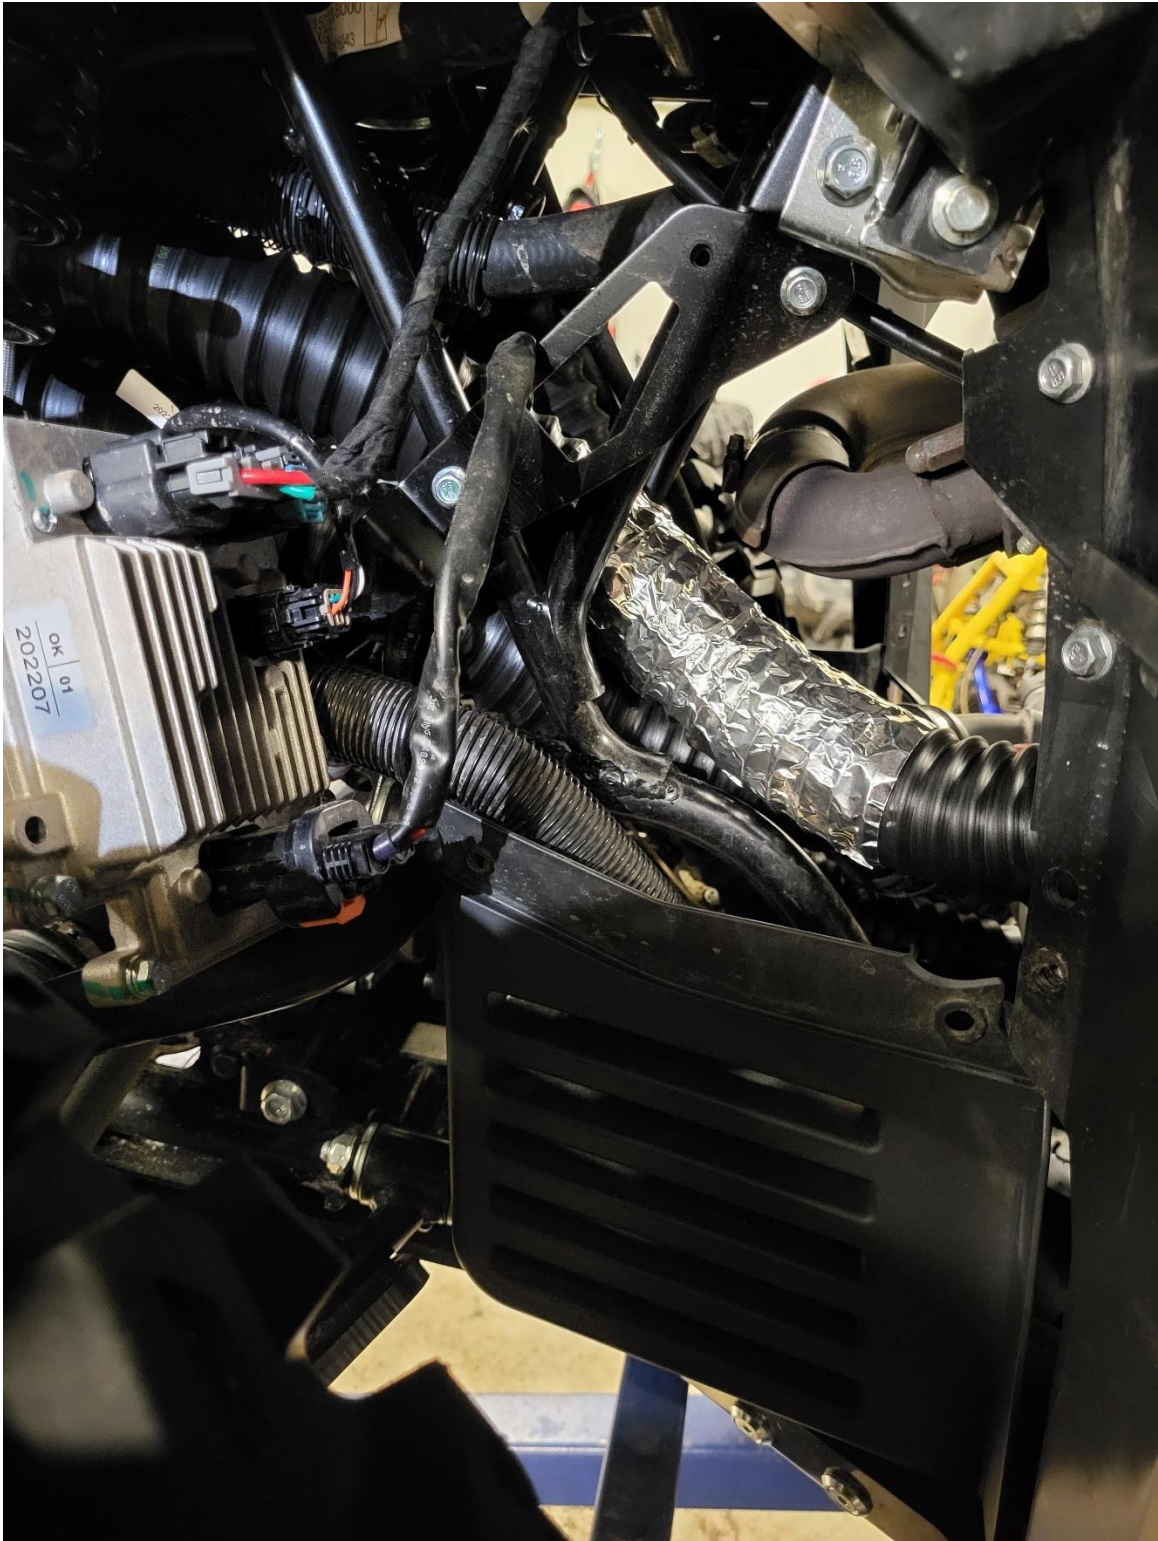

**Move regulator (two bolt) and install aluminum tape to hose, nearest point to header.
Reinstall regulator.**

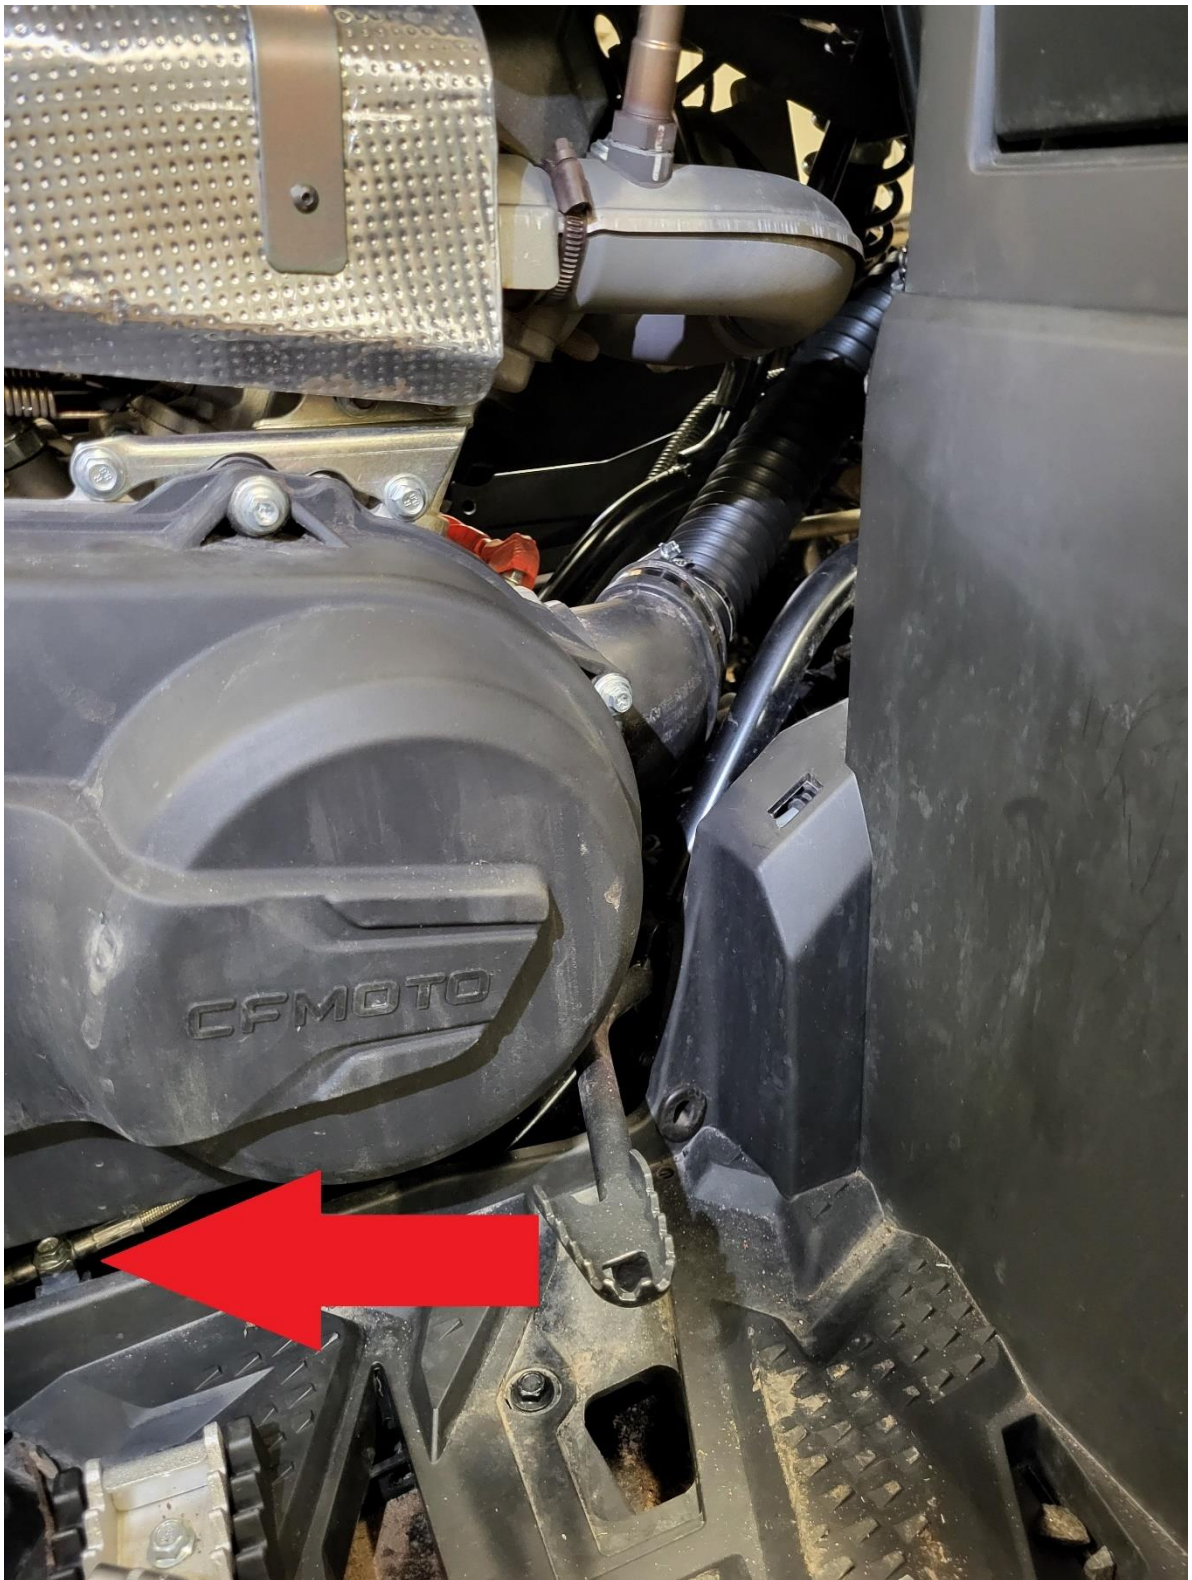

Open brakeline bolt and take it off. Now you get enough space for the cvt outlet hose.



Pass the hose between the clutch cover and the frame.



CVT outlet hose comes from under the clutch cover and goes next to the power steering unit.



Install 51-76 silicone reducer, 90 degree pipe and connect hose.



Install snorkel cover and connect hoses.



Install all plastics back and enjoy!



HIISI PRODUCTS
for hard ride