

CFMoto CForce 800-1000 Radiator relocation installation



For beginning remove radiator and assemble radiator lift kit.

Yellow 6x16mm, **Red** 6x20mm and **Green** 8x20mm.



**Install water reservoir as it on picture.
Now you can also install new reservoir hose (60cm).**



Add radiator lift kit to front rack, use upper position.



Mark holes.



Drill 9mm to the marked places.




Sand the protrusions around the holes.




**Install right and left rack to the radiator cover using 8x20mm bolts.
Install all to back to front rack frame.**

Now you can install radiator to the cover.

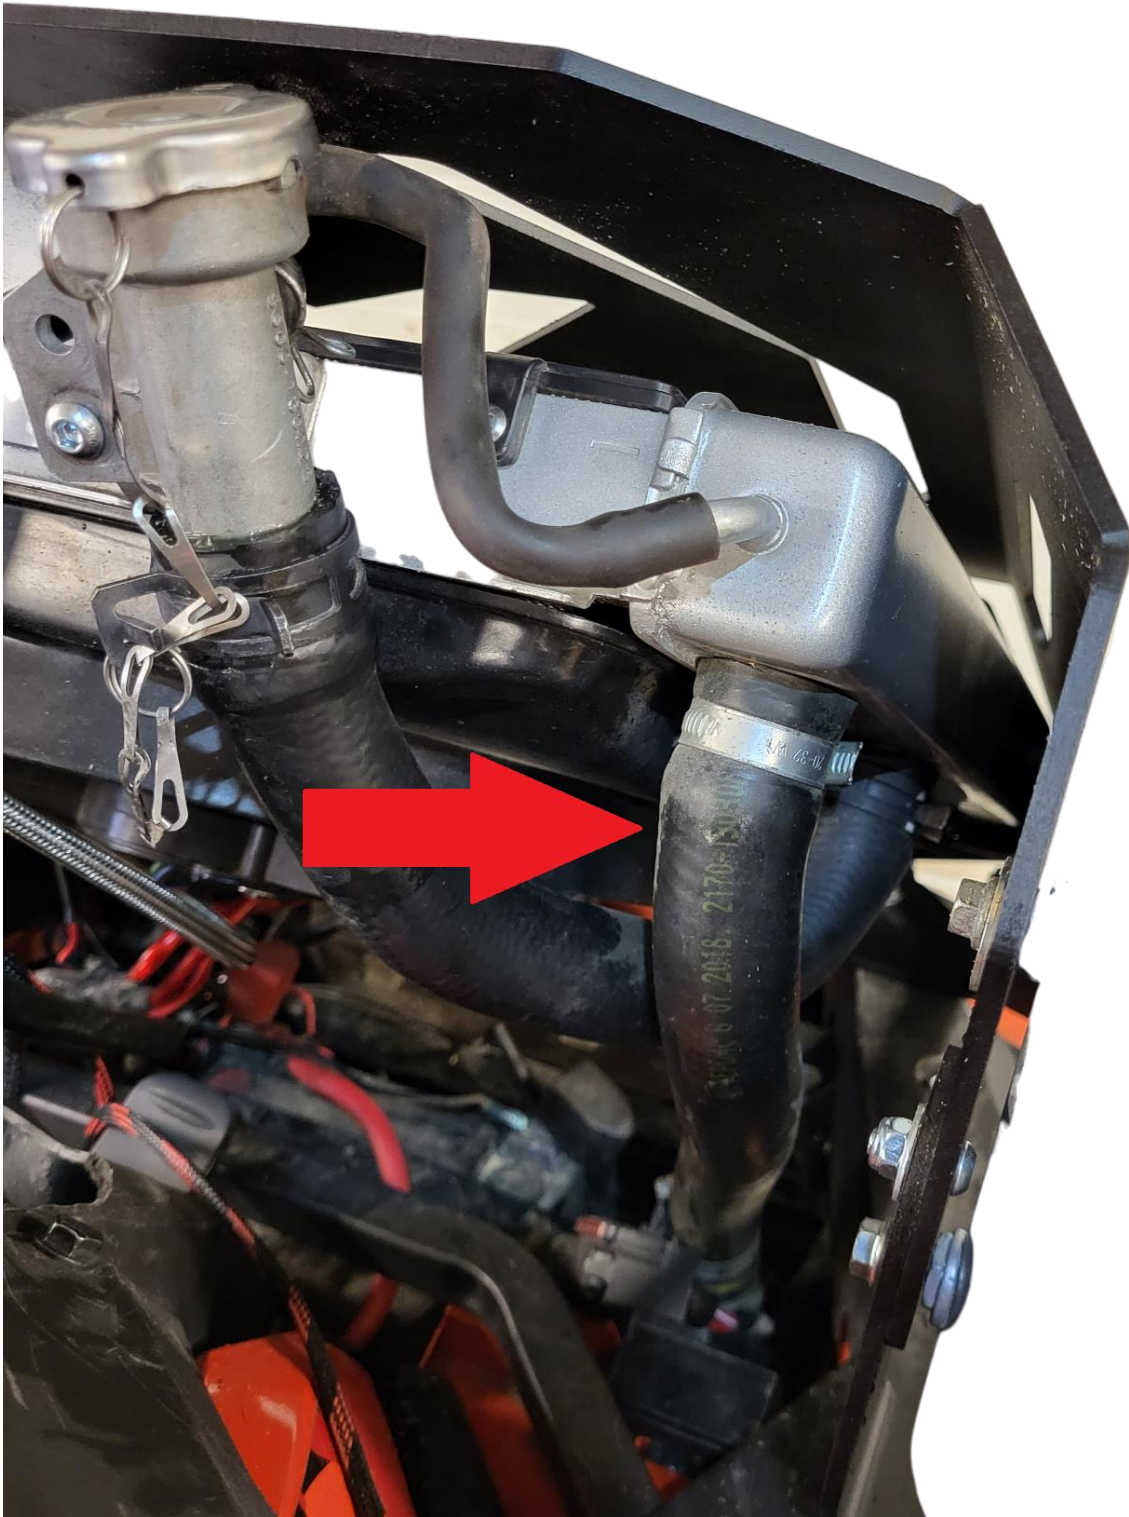

Connect upper water hose.

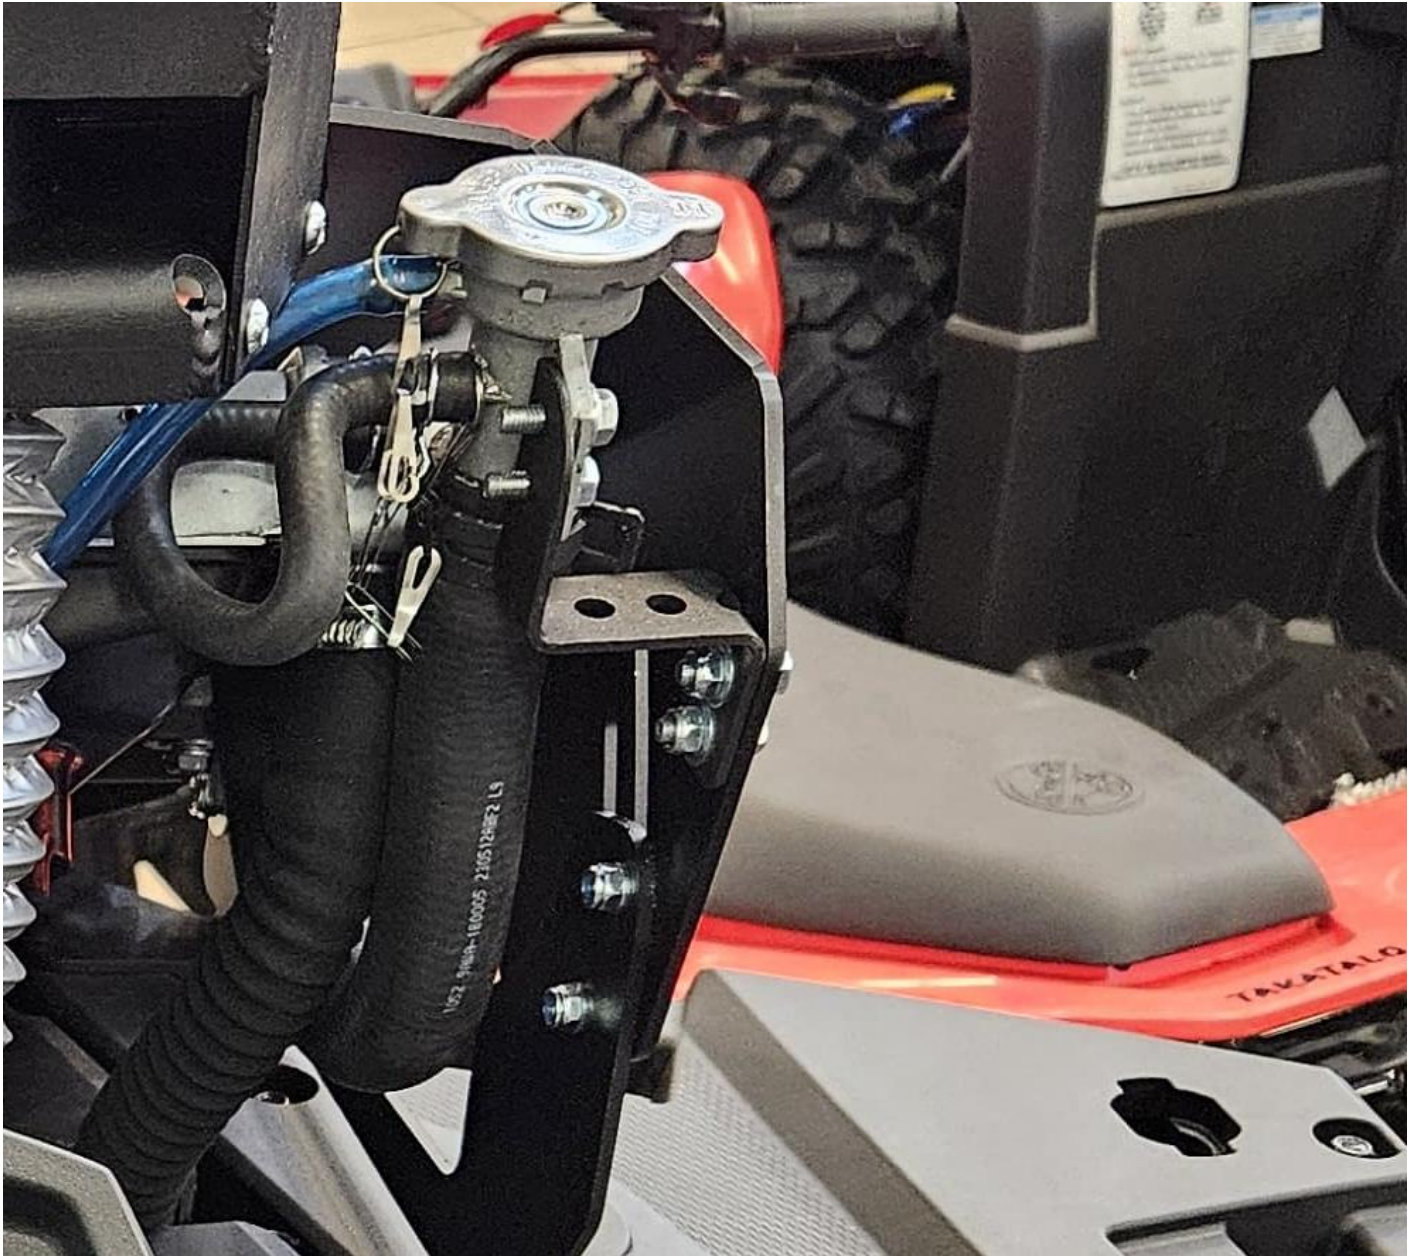

**Install water filling port mount and hoses to water filling port.
(water filling hose, reservoir hose and overflow hose).**



Connect lower water hose.



Cut zip tie and connect fan wire.



Install plastics back and ENJOY YOUR RIDE!

